



### Installation Instructions For **Aurora LED Accent Housing Round & Square Trimless** AL1-ARE, AL1-ARB, AL1-ASE, & AL1-ASB

1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.purelighting.com info@purelighting.com

#### **General Information**

Fixture must be installed by a qualified electrician (check with local and national codes for proper installation). To prevent electrical shock, disconnect electrical supply before installation or servicing. Compatible only with traditional, level 5 surface finishing, not self-leveling, PVA primer systems. Not for use in wood or tile ceilings.

### **WORKFLOW CHART**



#### **ELECTRICAL CONTRACTOR**

- 1. Locate and mount housing
- 2. Screw and lock-in housing
- 3. Connect wires in housing



1. Install and cut drywall around housing.



- 1. Adjust plaster flange frame and tighten wing nuts.
- 2. Connect the LED MR16 wiring to the plaster plate.
- 3. Screw plaster plate into housing.
- 4. Test LED MR16.

#### DRYWALL CONTRACTOR

- 1. Plaster, sand & paint.
- 2. Clean aperture with clean damp towel.

### **ELECTRICAL CONTRACTOR**

- 1. Clean aperture with clean damp towel, where the drywall contractor missed.
- 2. Adjust pan rotation ring and aim lamp. You're done!


### **Important**




#### **Importante**

Escanear con el dispositivo móvil para ver el video de instalación o visite:

www.purelighting.com/aurora-install

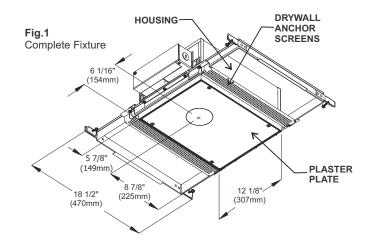

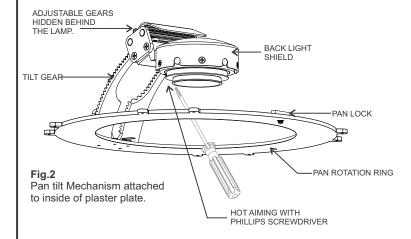


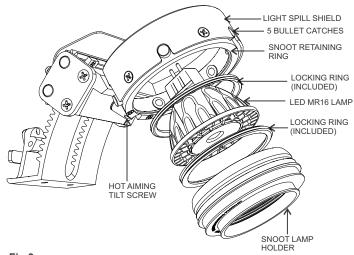


Fig.3 Snoot Assembly







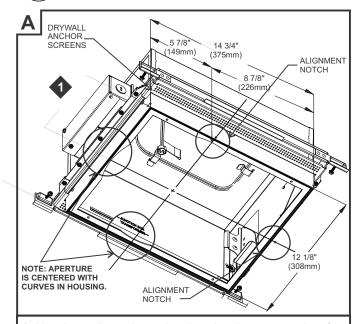


1: Use these dimensions when locating the center point of the aperture during the installation process. Align the fixture using a laser or a chalk line.


**NOTE:** Drywall anchor screens may be removed, if the joist are less than 14 1/2" apart. Refer to page 8 to shorten the hanger bars,

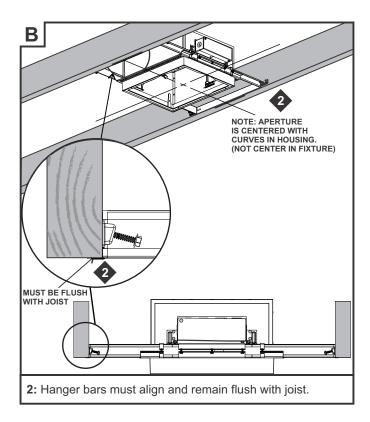

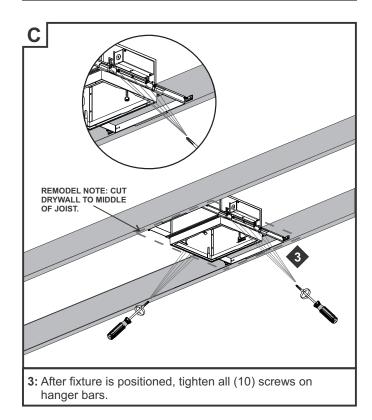


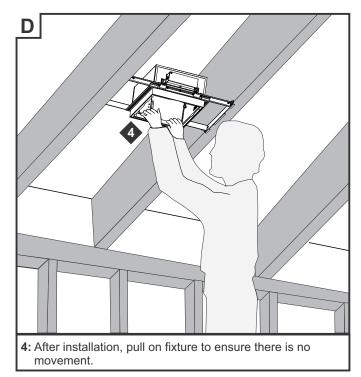



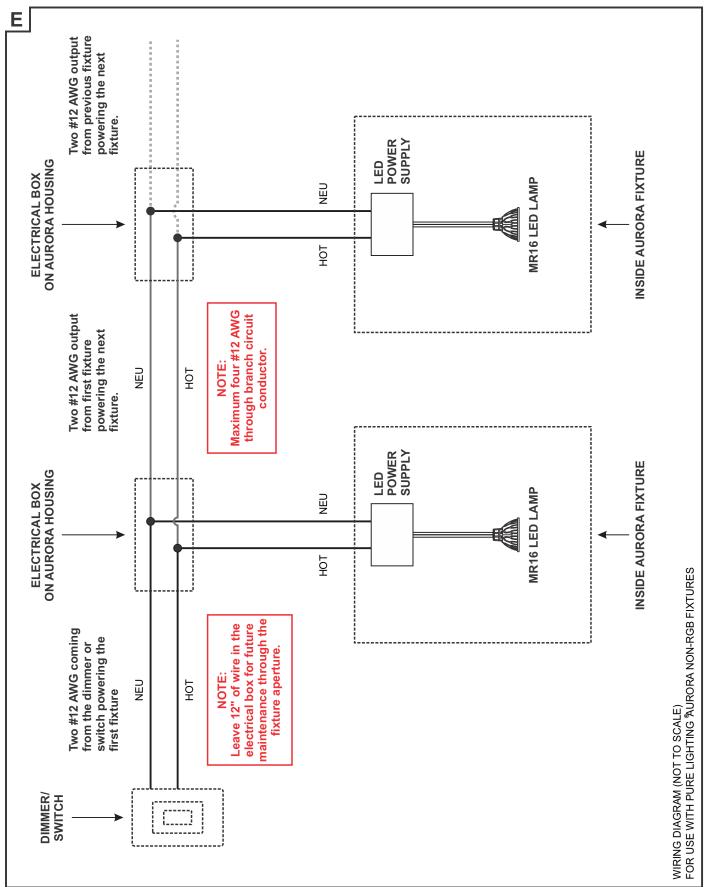



### DRYWALL CONTRACTOR

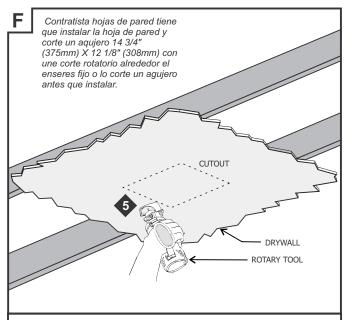


5: Drywall contractor must install drywall and cut 14 3/4" (375mm) X 12 1/8" (308mm) hole with rotary cutting tool around fixture or pre-cut hole in drywall prior to installation.


## ELECTRICAL CONTRACTOR

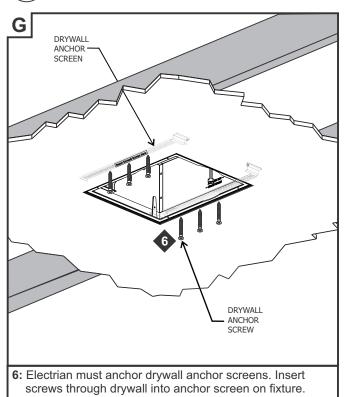


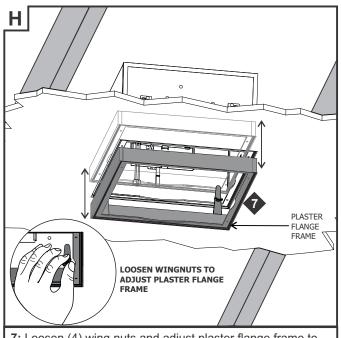



7: Loosen (4) wing nuts and adjust plaster flange frame to be flush with drywall. All 4 corners MUST be exactly even with drywall. Plaster flange frame adjusts to accommodate 1/2" (13mm) to 1 1/4" (32mm) ceiling thickness.

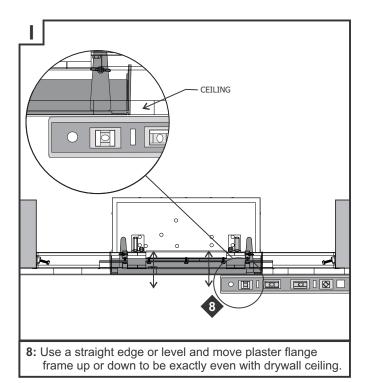


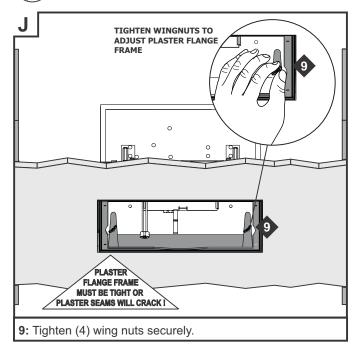


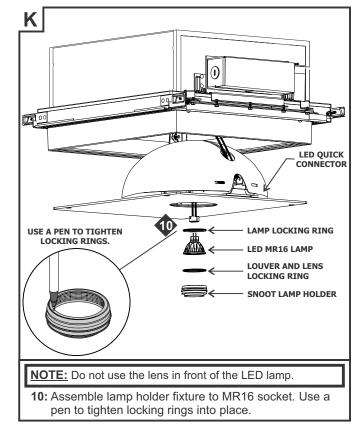


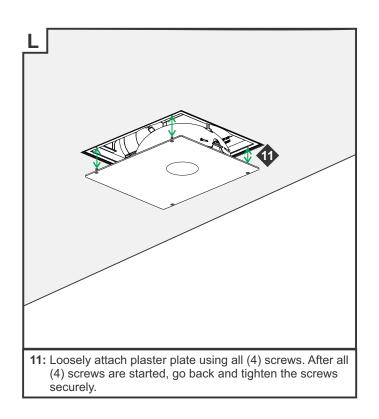


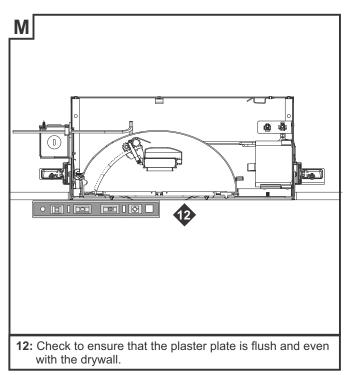


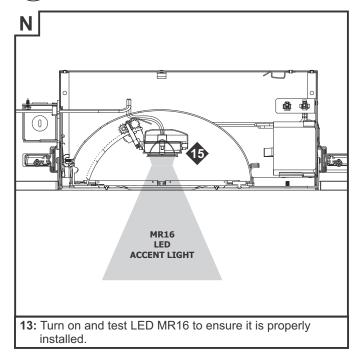

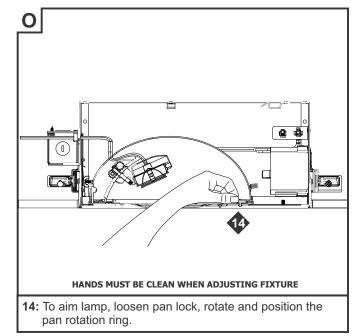

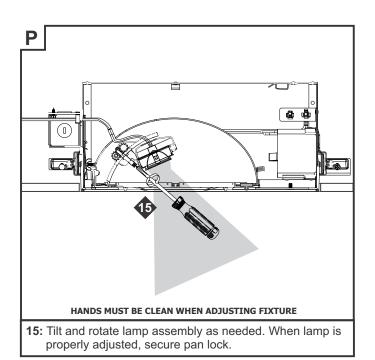

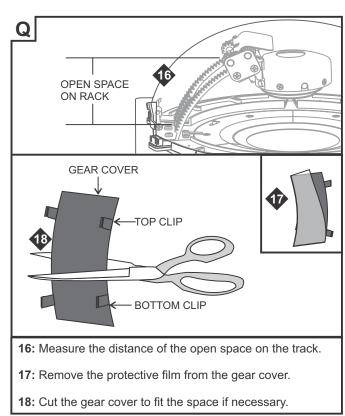


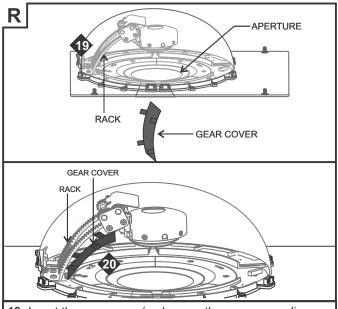


- 19: Insert the gear cover (make sure the gear cover clips are facing the lamp assembly rack) from the bottom of the aperture.
- 20: Secure by snapping in the two bottom clips of the gear cover first to the bottom edge, then snap in the top two clips to the top edge.

### **DRYWALL CONTRACTOR**


Compatible only with traditional, level 5 surface finishing, not self-leveling, PVA primer systems.

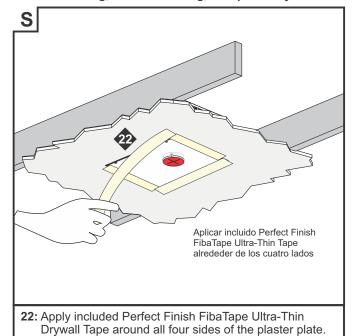


DO NOT OVERLAP.

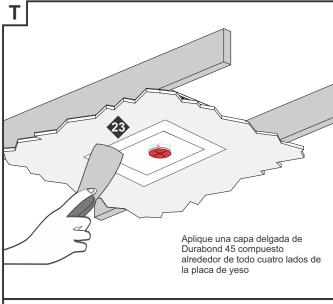


**23:** Apply a thin layer of Durabond 45 compound around all four sides of the plaster plate.

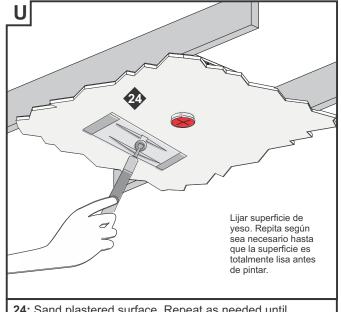

**24:** Sand plastered surface. Repeat as needed until surface is completely smooth before painting.

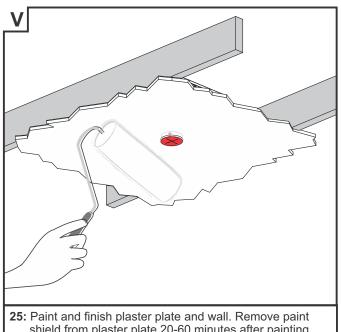


- shield from plaster plate 20-60 minutes after painting.
- 26: Clean all excess paint from the aperture.

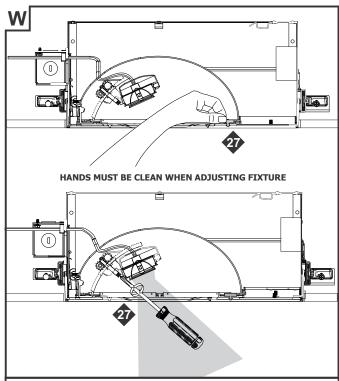



27: Wash hands and clean all drywall residue from inside aperture, with a clean damp towel. Electrician or lighting designer - ensure pan rotation ring is adjusted, locked in place, and the lamp is aimed properly.

#### SHORTENING THE HANGER BAR (ONLY FOR JOISTS SPACED LESS THAN 14.5")

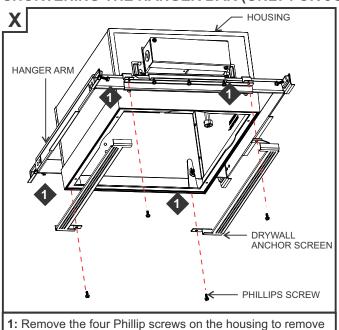

the two anchor screens, and put the screws back on.

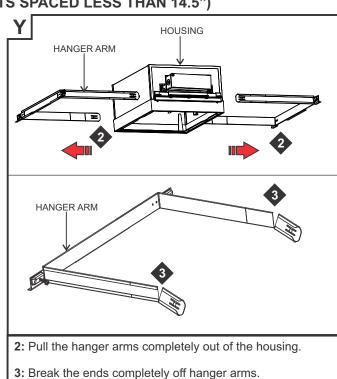

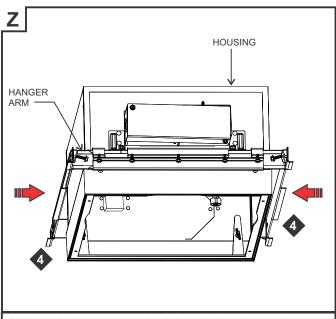

**4:** Insert the hanger arms back into the housing, and continue to step A on page 2 to complete instillation.