

INSTALLATION INSTRUCTIONS FOR

VISION 8

- This product is ETL listed.
- This product is suitable for indoor dry locations only.
- This product is for new construction jobs.
- This product can be dimmed with a low voltage electronic dimmer.

CAUTION-RISK OF FIRE

This product requires installation by a qualified electrician. Before installing, be sure to read all instructions and **TURN THE POWER TO THE ELECTRICAL BOX OFF.**

STEP 1

Before putting up the drywall, mount the aluminum box to the wall stud. Run the 120v supply wire from one box to the next. Using the screws provided, mount the plaster screen onto the aluminum box. Next measure and then cut the drywall appropriately so that the square hole on the plaster screen is not covered. The metal edges coming out should be the border for the hole in the drywall.

STEP 2

Next, after the drywall is properly installed and the 120v wires are run, make the connections to the transformer. The wires coming from the fixture should be connected to the blue 12v wires coming out of the transformer. The 120v supply wires should be connected to the black and white wires on the transformer. The 120v hot supply wire should be connected to the black transformer wire and the 120v neutral supply wire should be connected to the white wire coming out of the transformer.

STEP 3




Carefully, put the transformer and the wire into the aluminum box. Next slide the top of the fixture into the hole that was cut in the drywall.

STEP 4

Then carefully insert the bottom by pushing up the bottom spring clip and sliding it into the drywall and electrical box.

STEP 5

To install bulb press on back corners of lens and pivot brackets holding the lens. Slide out lens and insert 50W / 12V bulb. Do not touch bulb with bare hands, use oil free tissue or gloves.

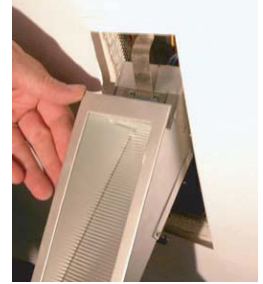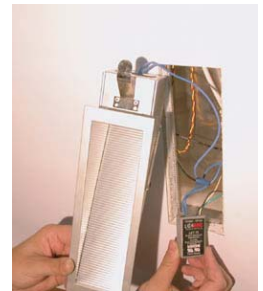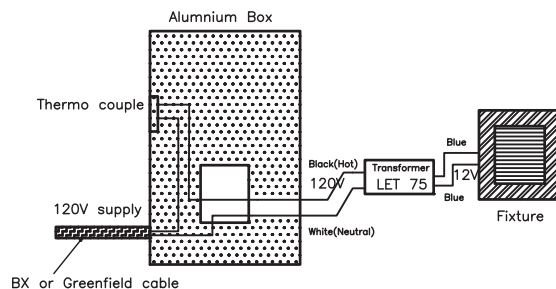

INSTALLATION