

INSTALLATION INSTRUCTIONS FOR

SATIN CEILING

- This product is ETL listed.
- This product is suitable for indoor dry locations only.
- This product can be mounted to either a 4" square electrical box with round plaster ring or an octagon electrical box.
- This Incandescent model can be dimmed with a standard incandescent dimmer. Fluorescent version cannot be dimmed.

CAUTION-RISK OF FIRE

This product requires installation by a qualified electrician.
Before installing, be sure to read all instructions and
TURN THE POWER TO THE ELECTRICAL BOX OFF.

STEP 1

Using the wire nuts provided, attach the black marked wire to the 120VAC hot supply wire. Then, attach the white marked wire to neutral. Make sure that the fixture wires pass through the offset hole through the bushing in the center of the canopy.



STEP 2

Make sure all the wires go into the junction box. Using the two 8-32nd screws provided attach the canopy to the junction box.




STEP 3

Using the thumbnuts provided, attach the fixture to the canopy. Make sure that the fixture is tight and flushed against the canopy.



STEP 4

Install bulb(s). For halogen models, make sure you do not touch the bulb itself, use tissues or gloves to make sure oil from hands does not get on the bulb. For T3/RSC bulbs carefully insert bulb into white marked (neutral) socket first, then insert other end into black (hot) socket. For fluorescent models, make sure you insert the bulb into the lamp support first, then insert the bulb into place by pushing the pins going into the socket.

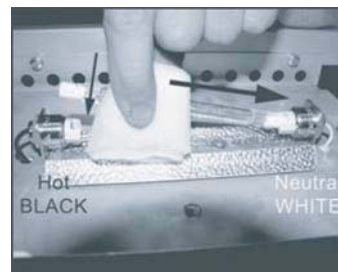

STEP 5

To install the glass, carefully slide the glass frame into the 3 slots then turn glass frame clockwise to lock into place.



INSTALLATION