

904-FJ-K2-01





1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.edgelighting.com info@edgelighting.com


Installation Instructions for Fast Jack K2 LED Pendant

IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- The product is intended to be used with Edge Lighting Monorail systems only.


SAVE THESE INSTRUCTIONS!


Adjust the Fixture Height

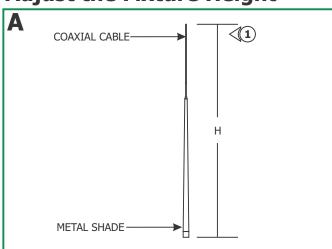


1: Cut the coaxial cable to the desired height (H) with a sharp cutter. The overall fixture height is measured from the bottom of the metal shade to the end of the coaxial cable.

- 2: Loosen the M4 set screw on base of the coaxial fixture connector with the 2mm Allen wrench provided. **Do not remove this set screw.**
- **3:** Remove the M3 set screw on tip of the connector with the 1.5mm Allen wrench provided.

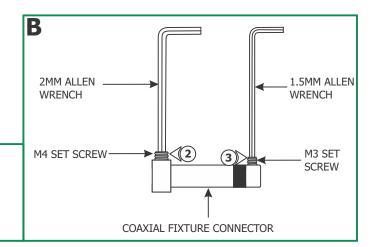


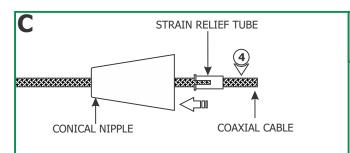


4: Feed the coaxial cable through the conical nipple and flared side of the strain relief tube. Slide the conical nipple and strain relief tube down the coaxial cable.

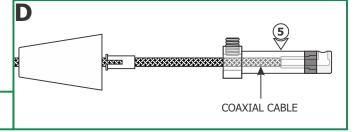

5: Feed the coaxial cable into the coaxial fixture connector. The coaxial cable will come to a stop point.

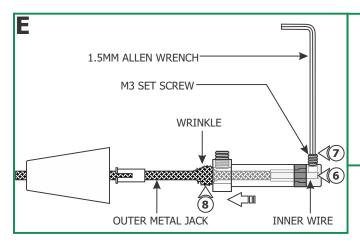

- **6:** Keep feeding the coaxial cable in until the inner wire is visible in the screw hole of the fixture connector tip. The outer metal jacket will start to wrinkle.
- 7: Hold the fixture connector in place. Replace and tighten the M3 set screw on fixture connector tip with the 1.5mm Allen wrench.
- 8: Pull down the outer metal jacket to smooth the wrinkles.

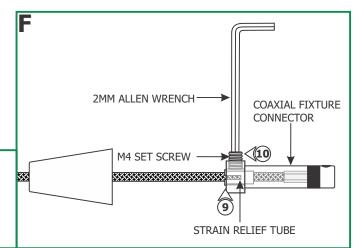

- **9:** Push the strain relief tube completely into the coaxial fixture connector. Make sure the slot on the strain relief tube is not inline with the M4 set screw.
- 10: Tighten the M4 set screw with the 2mm Allen wrench.

