



1718 W. Fullerton Chicago, IL 60614
 Ph: 773.770.1195 • Fax: 773.935.5613
 www.PureEdgeLighting.com • info@PureEdgeLighting.com
 © 2016 PureEdge Lighting. All Rights Reserved.

Installation Instructions for Heavy Duty Fast Jack Male Coaxial Fixture Connector

FJ-MCH_


IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- The product is intended to be used with Edge Lighting Fast Jack coaxial cable fixtures that are 5lbs or heavier.

SAVE THESE INSTRUCTIONS!



Install the Fixture Connector

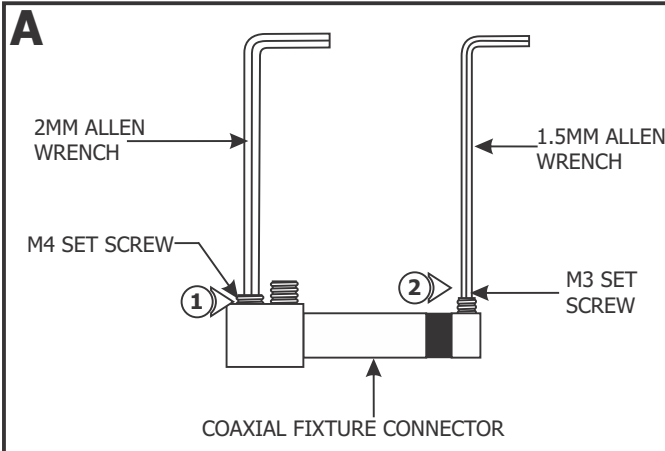


NOTE: Scan the QR Code to watch the video clip of the following steps or visit


www.PureEdgeLighting.com/video_feed/installation_fast_jack_connector

1: Loosen the two M4 set screw on base of the coaxial fixture connector with the 2mm Allen wrench provided. **Do not remove these set screw.**


2: Remove the M3 set screw on tip of the connector with the 1.5mm Allen wrench provided.

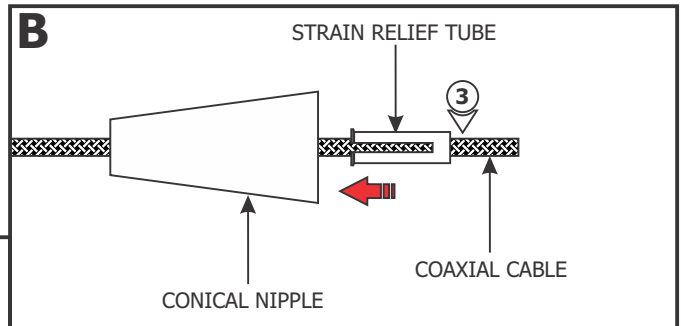

3: Feed the coaxial cable through the conical nipple and flared side of the strain relief tube. Slide the conical nipple and strain relief tube down the coaxial cable.


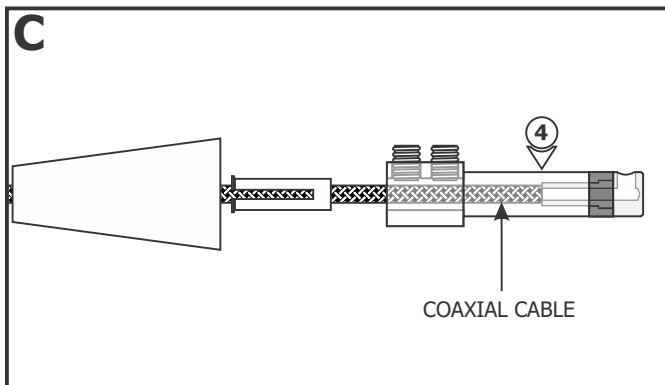


4: Feed the coaxial cable into the coaxial fixture connector. The coaxial cable will come to a stop point.

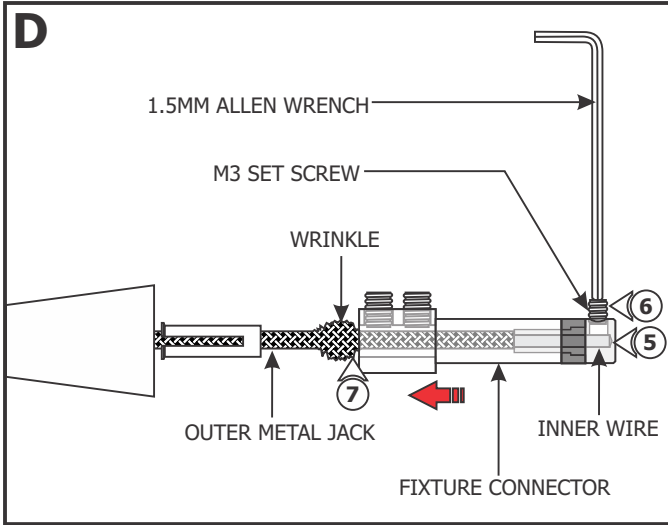

- 5:** Keep feeding the coaxial cable in until the inner wire is visible in the screw hole of the fixture connector tip. The outer metal jacket will start to wrinkle.
- 6:** Hold the fixture connector in place. Replace and tighten the M3 set screw on fixture connector tip with the 1.5mm Allen wrench.
- 7:** Pull down the outer metal jacket to smooth the wrinkles.

- 8:** Push the strain relief tube completely into the coaxial fixture connector. Make sure the slot on the strain relief tube is not in line with the M4 set screw.
- 9:** Tighten the two M4 set screws with the 2mm Allen wrench.

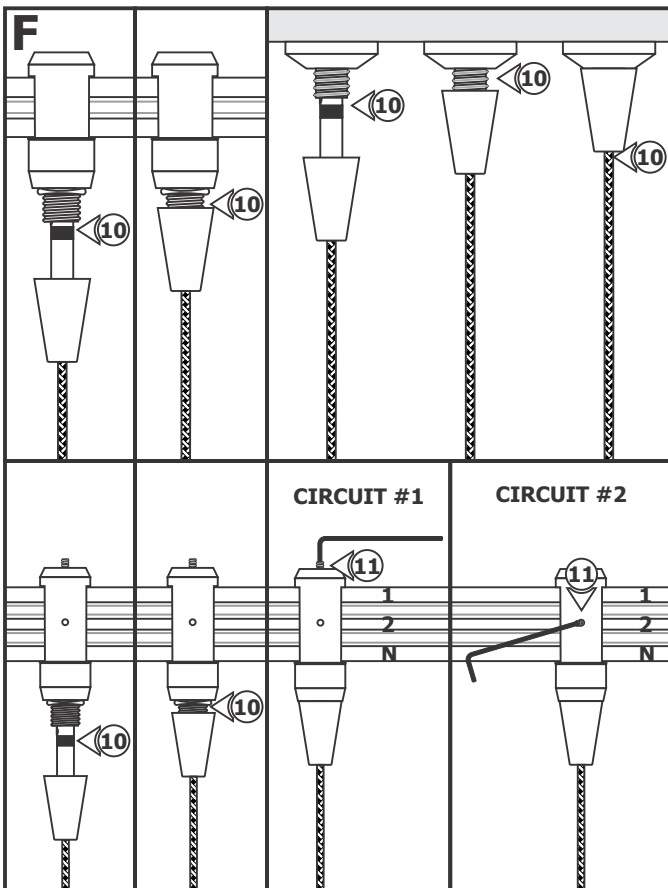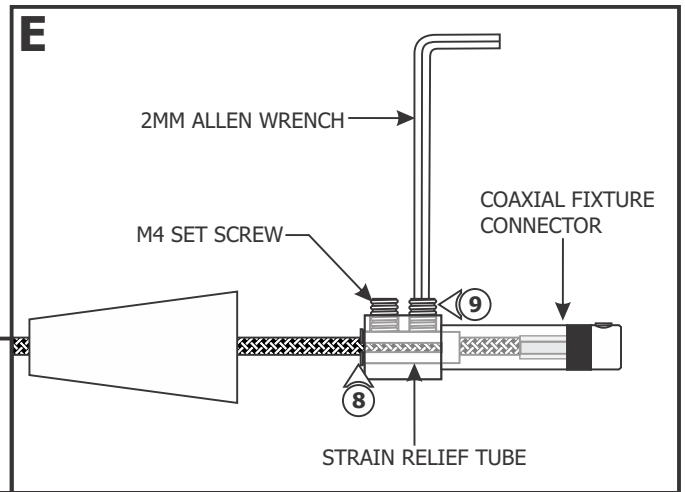

- 10:** Use fingers to tighten the Fast Jack fixture connector into the Fast Jack system connector (Monorail, Monorail Wall, Monorail 2 Circuit, or multi-port and mono-point canopies. Refer to the instructions provided with the system connector or canopy).
- 11:** Refer to the instructions provided with the Monorail 2 Circuit fixture connector to choose the Circuit #1 or Circuit #2.