



1718 W. Fullerton Chicago, IL 60614
 Ph: 773.770.1195 • Fax: 773.935.5613
 www.PureEdgeLighting.com • info@PureEdgeLighting.com
 © 2016 PureEdge Lighting. All Rights Reserved.

Installation Instructions for 2" Round & Square Fast Jack LED Power Canopies with 2" Plaster Ring


FJP-2RD-LED-

FJP-2SQ-LED-


IMPORTANT INFORMATION

- This instruction shows a typical installation.
- This product is ETL listed for indoor dry locations.
- This product mounts to a standard electrical box, minimum 2.2" deep, using the 2" plaster ring provided.
- Minimum electric box volume must be 6 cubic inches (98 cubic centimeters).
- This product is for use only with LED fixture.
- For dimming information visit www.PureEdgeLighting.com

SAVE THESE INSTRUCTIONS!

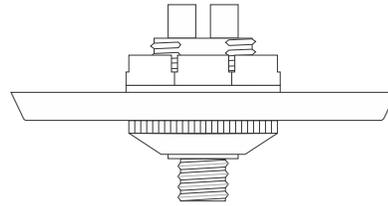


Section One: Install the 2" Plaster Ring

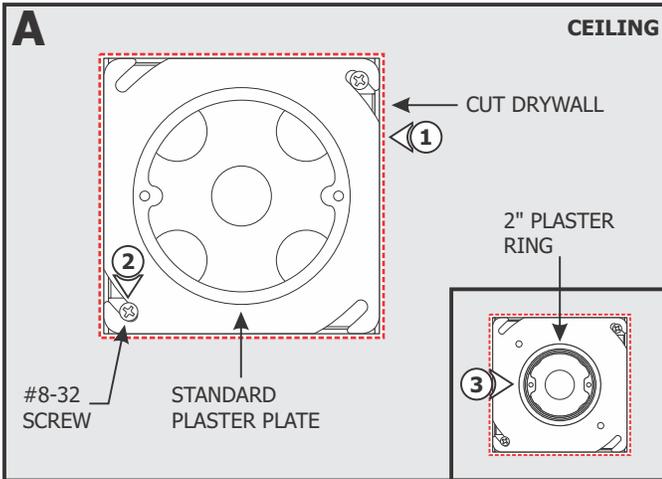

NOTE: Electrical box must be minimum 2.2" deep. Otherwise refer to Section Two to install the provided 2.2" deep electrical box with hanger bars.

- 1: Cut away the drywall where the electrical box is located.
- 2: Uninstall the standard plaster plate by removing the #8-32 screws.
- 3: Install the 2" Plaster Ring to the electrical box using two #8-32 screws.
- 4: Plaster and finish around the electrical box opening.
- 5: Finish installation by following steps in "Install Fast Jack Port" section.


Section Two: Install the 2.2" Deep Electrical Box with 2" Plaster Ring

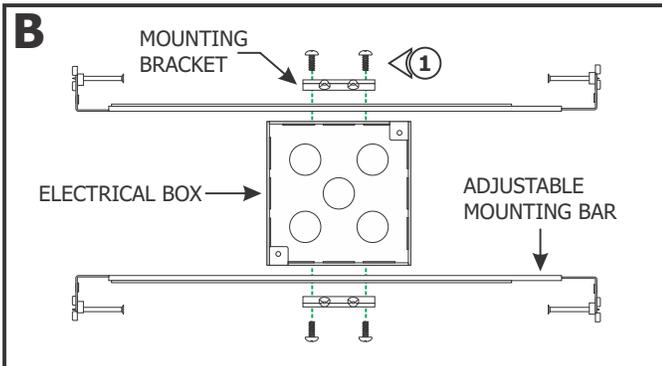


- 1: Mount each adjustable mounting bar to one side of the electrical box and secure them with the mounting brackets and two Phillips screws provided.

NOTE: Adjustable mounting bars mount to studs that are spaced 14.5" to 25" apart.

- 2: Select the location between the two studs for the electrical box to be mounted.
- 3: Place the adjustable mounting bar tabs between the studs. Secure the adjustable bars to the studs with the #8 screws.

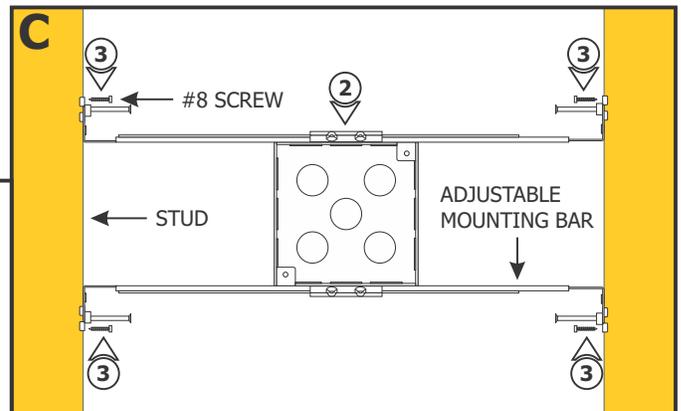


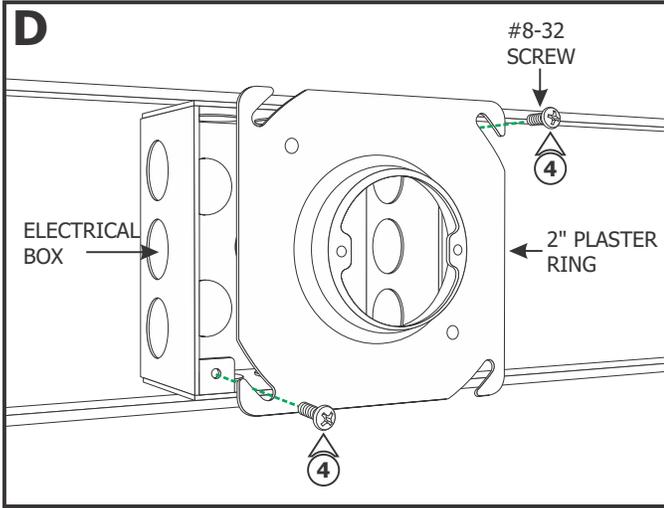


NOTE: Electrical box must be mounted to allow clearance of 1/2" between the face of the junction box and the drywall surface.

4: Install the 2" Plaster Ring Adapter to the electrical box using two #8-32 screws.

- 5:** Use a circular saw to cut out the drywall section where the electrical box opening is located.
- 6:** Install the drywall. If necessary, plaster and finish the drywall.
- 7:** Finish installation by following steps in "Install Fast Jack Port" section.

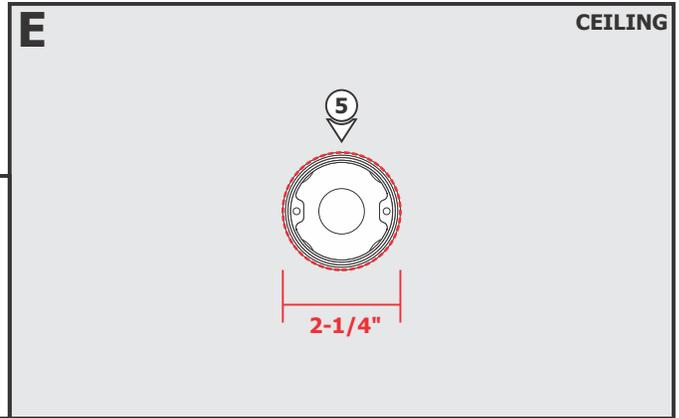



Section Three: Install the Fast Jack Port

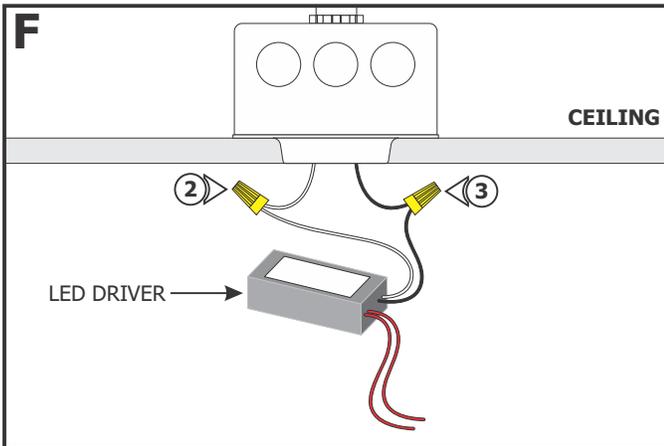

- 1:** Turn the power to the electrical box off.
- 2:** Connect the white LED driver wire to the neutral power wire with a wire nut.
- 3:** Connect the black LED driver wire to the hot power wire with a wire nut.
- 4:** Place the LED driver and connections inside the electrical box.



5: Connect each transformer wire to one wire of the Fast Jack Port assembly with a wire nut.

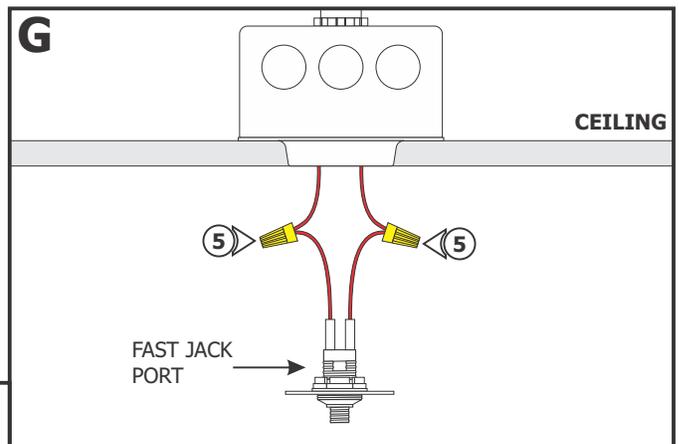

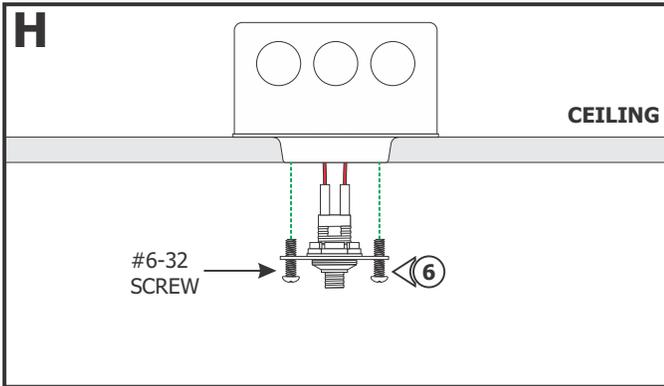

6: Place all wires and wire nut connections properly inside the electrical box. Mount the Fast Jack Port assembly to the 2" Plaster Ring using two #6-32 screws provided.

7: Place the canopy onto the Fast Jack Port assembly against drywall and secure it in place by tightening the knurled cap to the Fast Jack port. **Make sure the knurled cap is not cross threaded.**

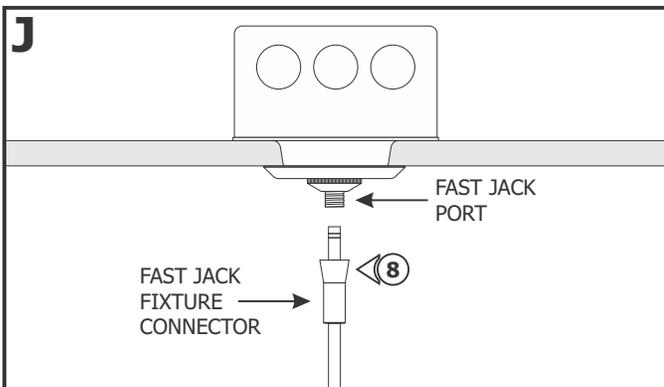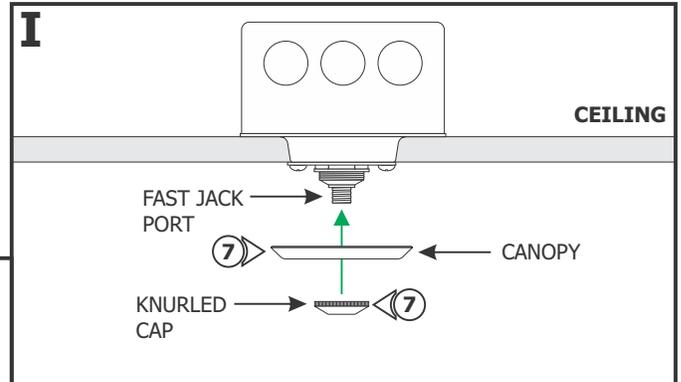

CAUTION: Risk of Fire: MAX load of Fast Jack LED canopy is **60 Watt.**

8: Use fingers to tighten the Fast Jack fixture connector into the Fast Jack port.