



1718 W. Fullerton Chicago, IL 60614
 Ph: 773.770.1195 • Fax: 773.935.5613
 www.PureEdgeLighting.com • info@PureEdgeLighting.com
 © 2016 PureEdge Lighting. All Rights Reserved.

Installation Instructions for Monorail Fast Jack Fixture Connector

MC-FJ_


IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- The product is intended to be used with PureEdge Lighting Monorail systems only.


SAVE THESE INSTRUCTIONS!



Install the Monorail Fast Jack Connector

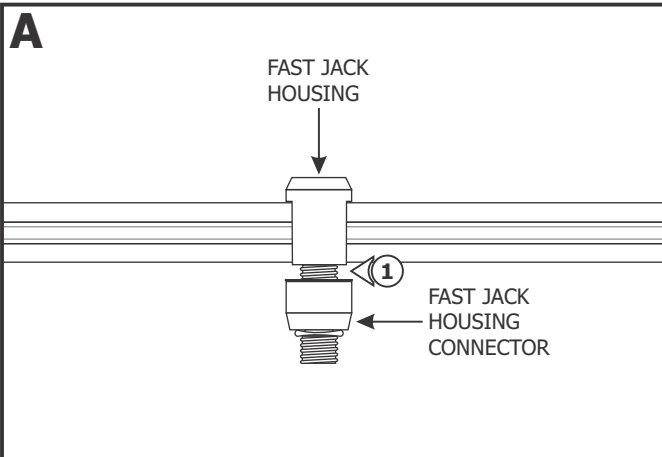

- 1:** Place the Fast Jack housing onto the Monorail and use fingers to tighten the Fast Jack housing connector to the Fast Jack housing. **Make sure that the Fast Jack housing connector is not cross threaded.**

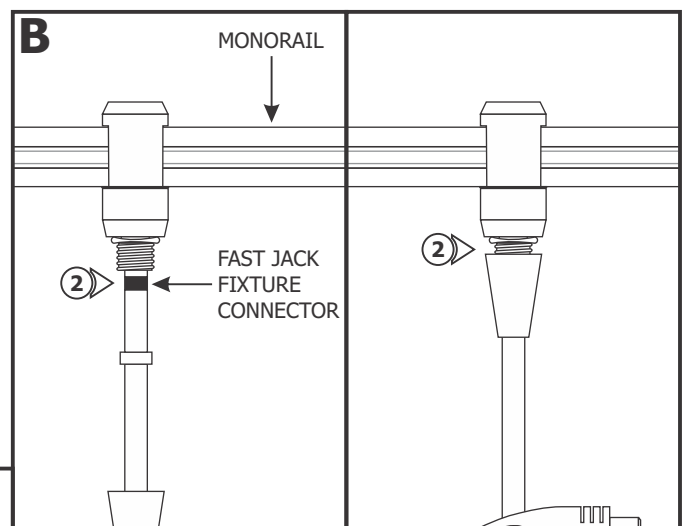

- 2:** Use fingers to tighten the Fast Jack fixture connector into the Fast Jack housing connector.