


## Installation Instructions for Monorail Male End Flexible Connector


### IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- The product is intended to be used with Edge Lighting Monorail system only.
- This product jumps the power from one Monorail run to the other Monorail run.


**SAVE THESE INSTRUCTIONS!**

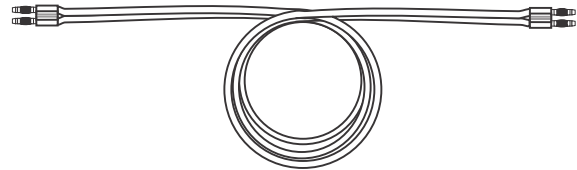

## Install the Monorail Male End Flexible Connector

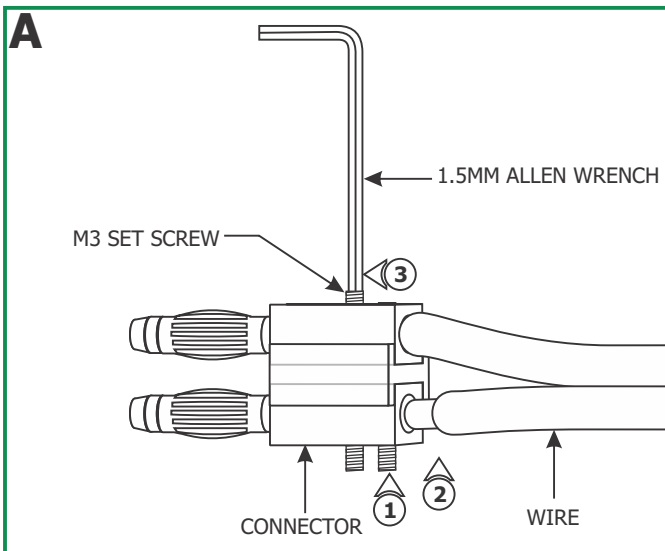

- 1: (OPTIONAL)** To shorten the adjustable cable loosen the four M3 set screws on one connector (**Do Not Remove**) with the 1.5mm Allen wrench provided, and pull the adjustable cable out of the connector.
- 2:** Shorten the adjustable cable to the desired length. Strip 3/8" off of the insulation from the end of the wires.
- 3:** Insert the stripped portion of the wires completely into the connectors and tighten firmly the four M3 set screws with the 1.5MM Allen wrench.

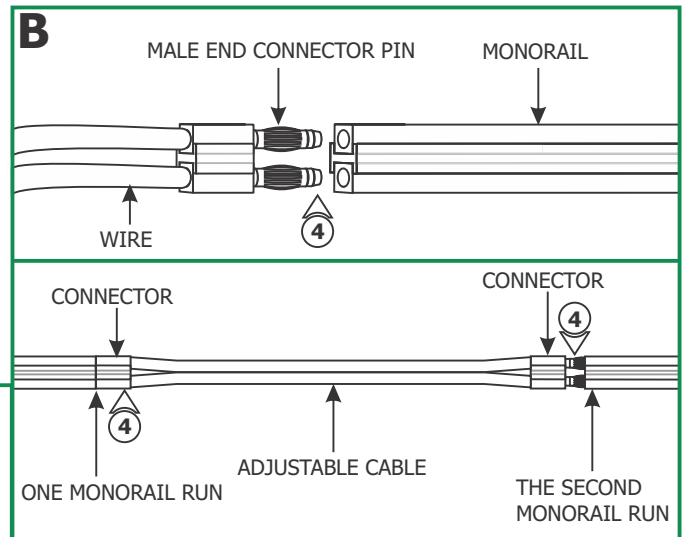

- 4:** Push one male end connector pins completely into one Monorail end run, and push the second connector pins of the other side completely into the other Monorail run. Make sure that the Monorail runs are supported by the standoffs. Refer to the instructions provided with the standoffs.