


Installation Instructions for Little Mesh Back Shade MR16

IMPORTANT INFORMATION


- This product is ETL listed for indoor dry locations.

SAVE THESE INSTRUCTIONS!

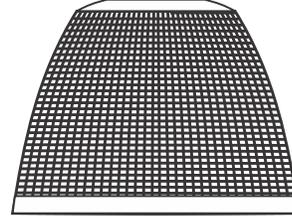

Install the Accessory Shade


A

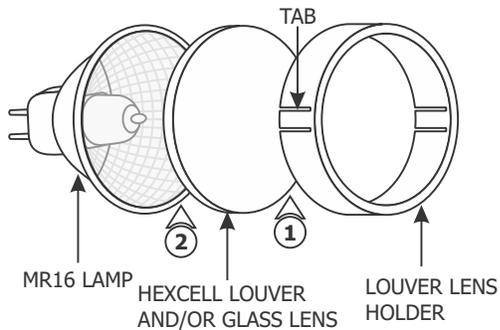

1: Place a Hexcell louver (Optional) or a glass lens (Optional) or a combination of a hexcell louver and glass lens into the louvers lens holder.

2: Place the MR16 lamp into the louvers lens holder.



B

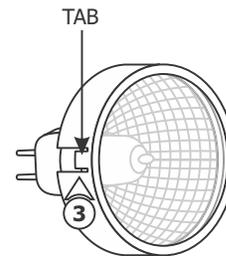

3: Press the tabs on sides of the snap lens holder against the MR16 lamp to keep it in the position.

Install the Accessory Shade in Low Rider type Fixtures

C

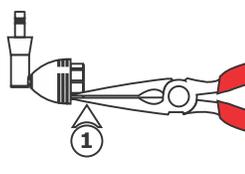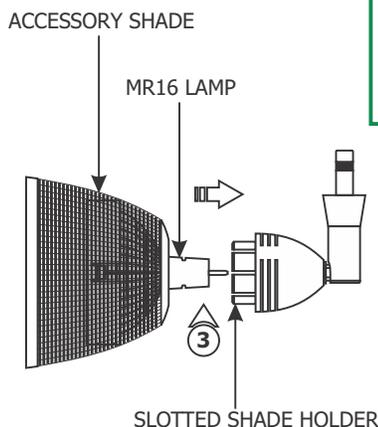


1: Place the MR16 lamp into the accessory shade and line up the MR16 lamp pins with the socket holes.


2: Push the lamp pins completely into the socket holes and simultaneously push the accessory shade onto the slotted shade holder.

3: The accessory shade must fit snugly onto the slotted shade holder. If adjustment is necessary, carefully bend the slotted shade holder tabs slightly in or out with needle-nose pliers.


Install the Accessory shade in Vespa type MR16 Sockets

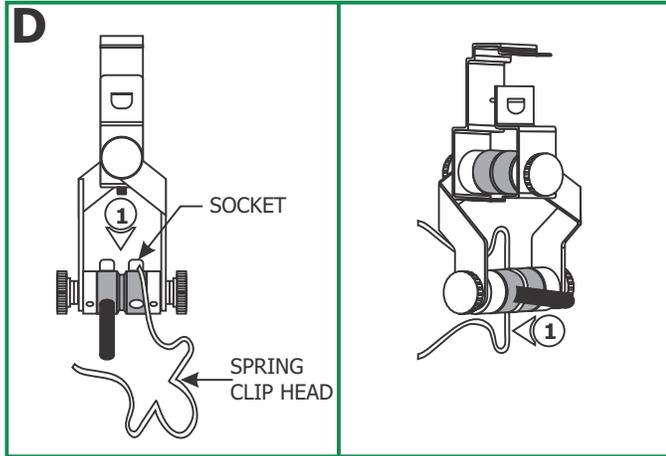

1: Push the spring clip completely onto the center of the socket groove until it snaps into place.

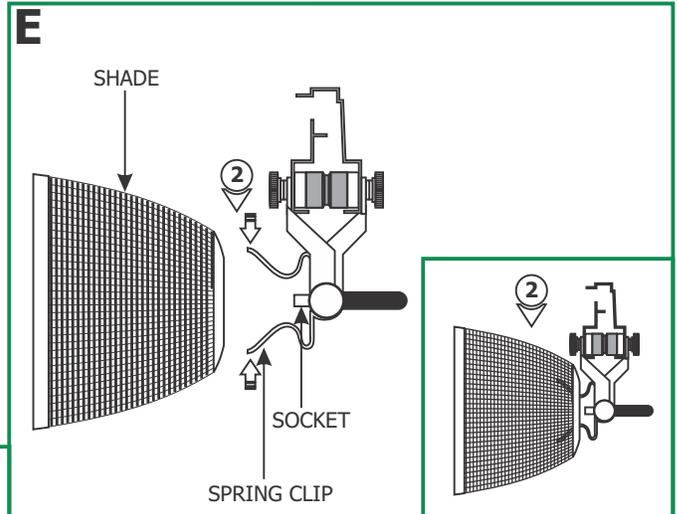

2: Squeeze the spring clip ends while inserting it into the shade.

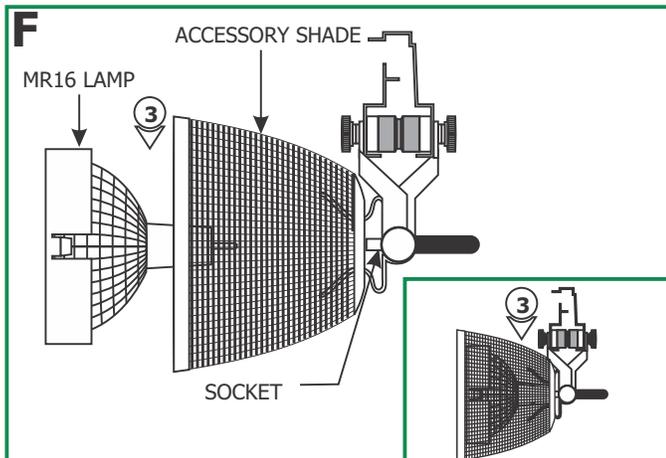

3: Place the MR16 lamp into the accessory shade and line up the MR16 lamp pins with the socket holes. Push the lamp pins completely into the socket holes.