



1718 W. Fullerton Chicago, IL 60614
 Ph: 773.770.1195 • Fax: 773.935.5613
 www.PureEdgeLighting.com • info@PureEdgeLighting.com
 © 2016 PureEdge Lighting. All Rights Reserved.



Installation Instructions for TruLine 1.6A - Avoid Dark Spots with Center Power Feeds

IMPORTANT INFORMATION

- Follow this guideline along the Center Feed instructions.

SAVE THESE INSTRUCTIONS!

Installation Guide for Room Wrapping Configurations

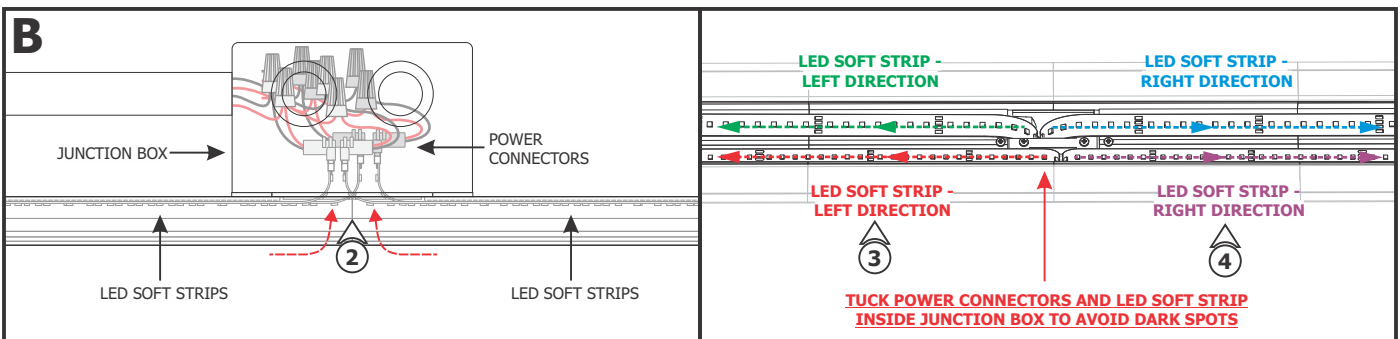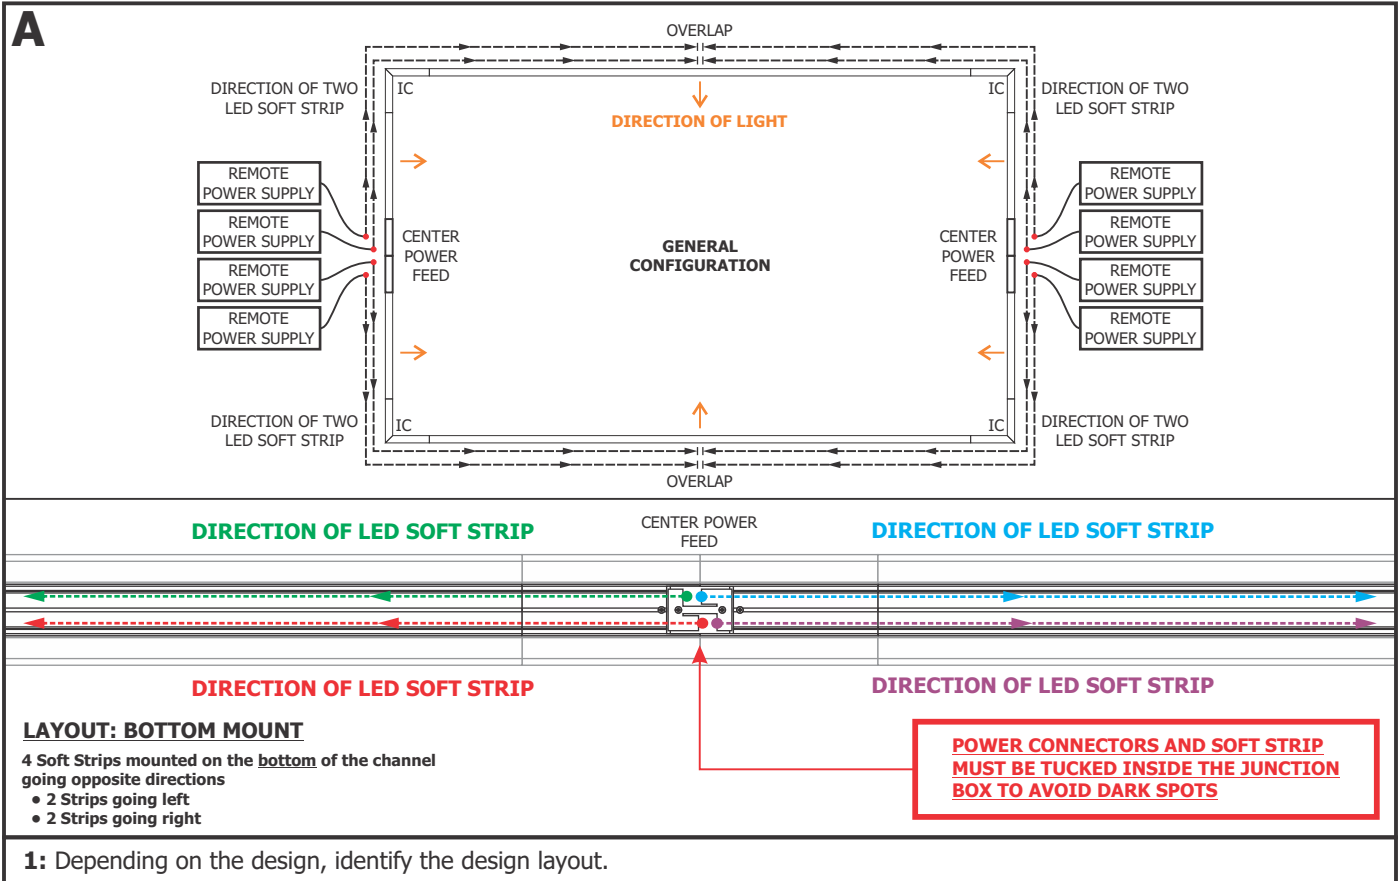



2: Feed all power connectors inside the junction box. Dump the LED Soft Strip slightly inside the junction box.

3: Install two LED Soft Strips flat on the bottom of the channel going to the left direction.

4: Install two more LED Soft Strips flat on the bottom of the channel going to the right direction.


Installation Guide for Picture Frame Configurations

C

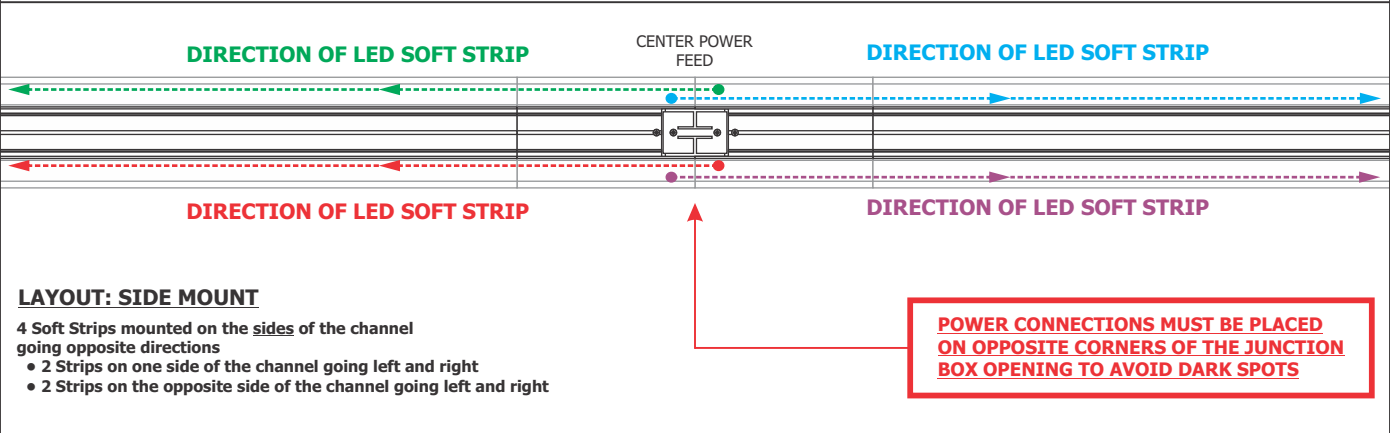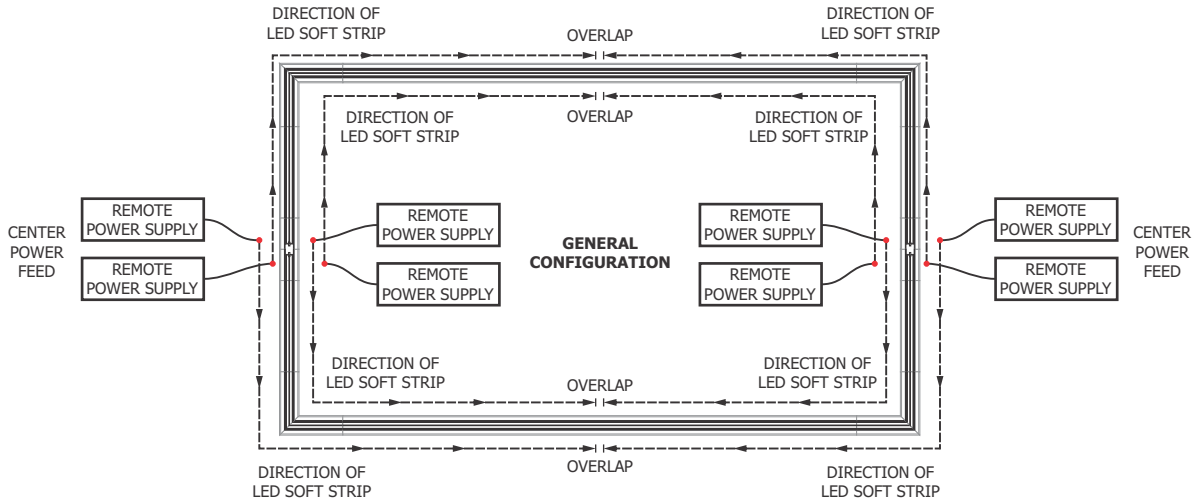

1: Depending on the design, identify the design layout.

D

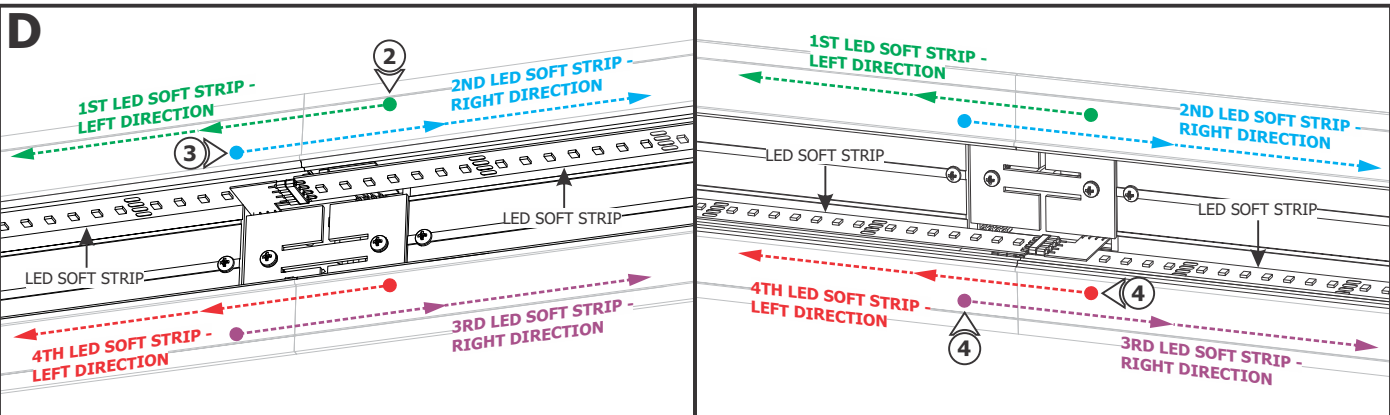

2: Place the first power connection on one side of the channel on the top right corner of the opening and install the LED Soft Strip going to the left direction.

3: Place the second connection on the same side of the channel overlapping the first connection on the top left corner of the opening and install the LED Soft Strip going to the right direction.

4: Repeat steps 2 and 3 for the other set of LED Soft Strip on the other side of the channel.

5: Power connections must be on opposite corners from each other to avoid dark spots.