



1718 W. Fullerton Chicago, IL 60614
 Ph: 773.770.1195 • Fax: 773.935.5613
 www.PureEdgeLighting.com • info@PureEdgeLighting.com
 © 2016 PureEdge Lighting. All Rights Reserved.

Installation Instructions for TruLine .5A and 1A - Avoid Dark Spots with Center Power Feeds


IMPORTANT INFORMATION

- Follow this guideline along the Center Feed instructions.

SAVE THESE INSTRUCTIONS!

Installation Guide for Room Wrapping Configurations

A

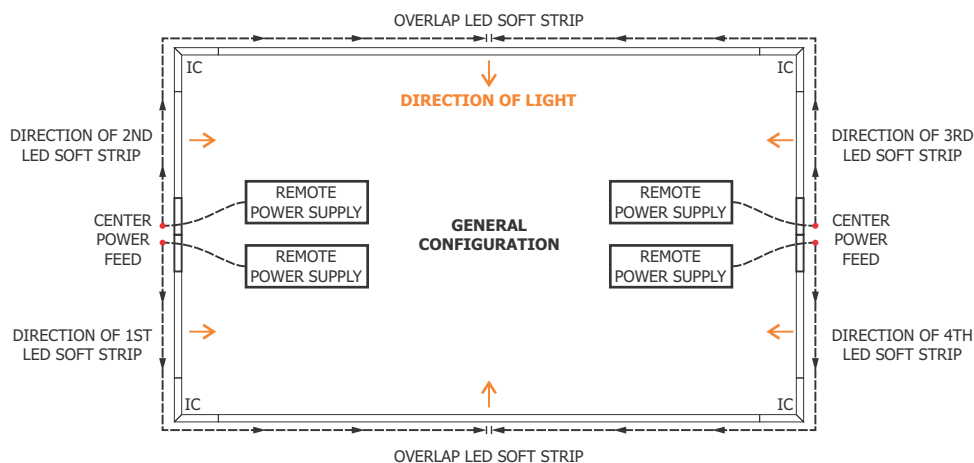

DIRECTION OF LED SOFT STRIP

DIRECTION OF OTHER LED SOFT STRIP

CENTER
POWER
FEED

LAYOUT: BOTTOM MOUNT


2 Soft Strips mounted on the bottom of the channel going opposite directions

- One Strip going left
- Other Strip going right

POWER CONNECTORS AND SOFT STRIP MUST BE TUCKED INSIDE THE JUNCTION BOX TO AVOID DARK SPOTS

1: Depending on the design, identify the design layout.

B

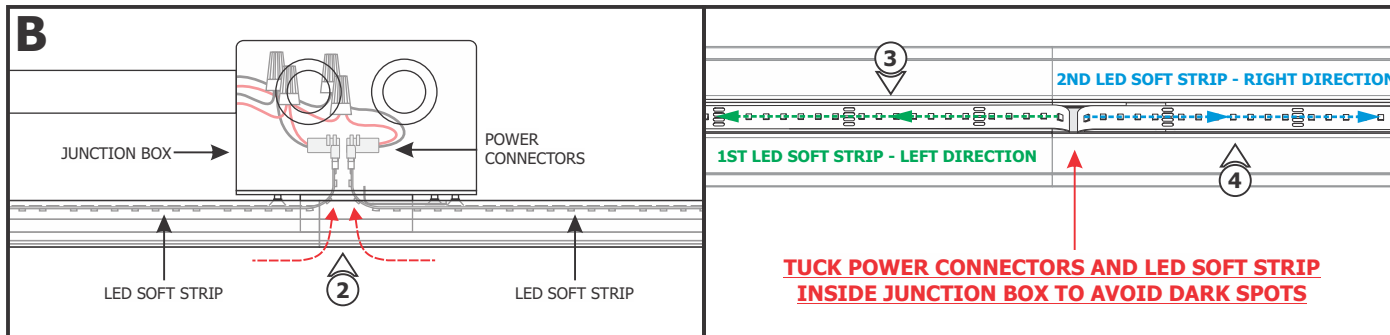


2: Feed all power connectors inside the junction box. Dump the LED Soft Strip slightly inside the junction box.

3: Install the first LED Soft Strip flat on the bottom of the channel going to the left direction.

4: Install the second LED Soft Strip flat on the bottom of the channel going to the right direction.

Installation Guide for Picture Frame Configurations

C

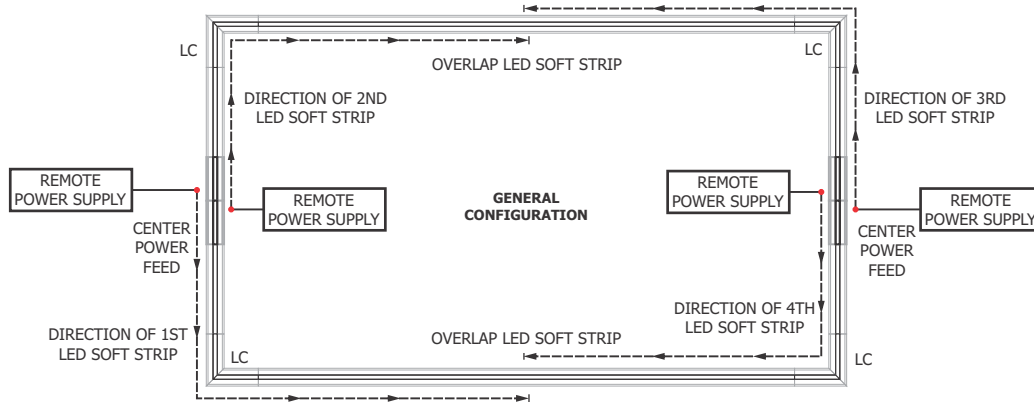

DIRECTION OF LED SOFT STRIP

CENTER
POWER
FEED

DIRECTION OF OTHER LED SOFT STRIP

LAYOUT: SIDE MOUNT


2 Soft Strips mounted on the sides of the channel going opposite directions

- One Strip on one side of the channel going left
- Other Strip on the opposite side of the channel going right

POWER CONNECTIONS MUST BE PLACED ON OPPOSITE CORNERS OF THE JUNCTION BOX OPENING TO AVOID DARK SPOTS

1: Depending on the design, identify the design layout.

D

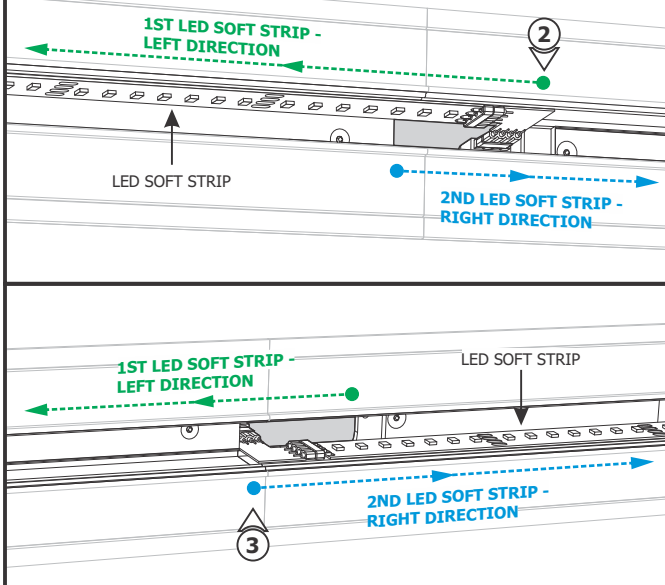

- 2: Place the first power connection on one side of the channel on the top right corner of the opening and install the LED Soft Strip going to the left direction.
- 3: Place the second power connection on the other side of the channel on the bottom left corner of the opening and install the LED Soft Strip going to the right direction.
- 4: Power connections must be on opposite corners from each other to avoid dark spots.